


The EZ sample label is smaller, more convenient and easier to use than ever before. Combined with online sample submission, this label reduces paperwork, minimizes errors and moves your samples to the laboratory floor more quickly.

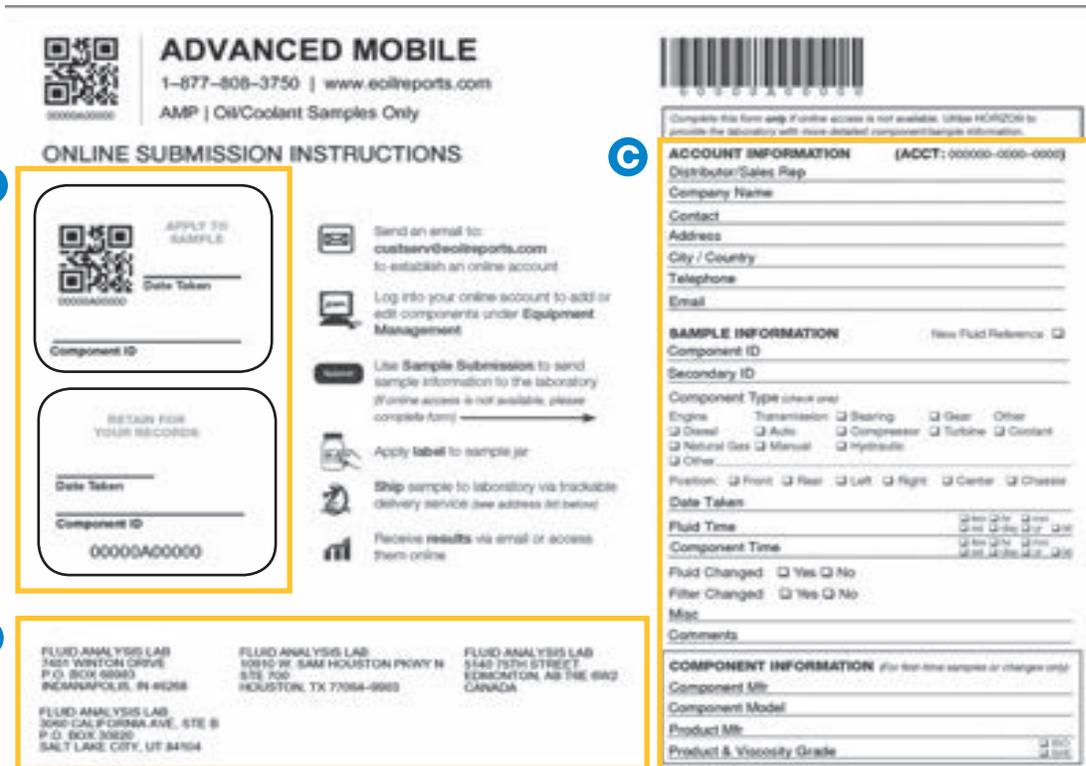

ADVANCED MOBILE
1-877-808-3750 | www.eoilreports.com
AMP | Oil/Coolant Samples Only

ONLINE SUBMISSION INSTRUCTIONS

A APPLY TO SAMPLE
Date Taken
Component ID

B RETAIN FOR YOUR RECORDS
Date Taken
Component ID
00000A00000

C ACCOUNT INFORMATION (ACCT: 00000-0000-0000)
Distributor/Sales Rep
Company Name
Contact
Address
City / Country
Telephone
Email

SAMPLE INFORMATION (New Fluid Reference:)
Component ID
Secondary ID
Component Type (check one):
Engine: Diesel Gas Other
 Natural Gas Manual Hydraulic
Transmission: Steering Gear Other
Position: Front Rear Left Right Center Chassis
Date Taken
Fluid Time
Component Time
Fluid Changed: Yes No
Filter Changed: Yes No
Misc
Comments

COMPLEMENT INFORMATION (For first-time samples or changes only)
Component Mt.
Component Model
Product Mt.
Product & Viscosity Grade

Send an email to: custserv@eoilreports.com to establish an online account

Log into your online account to add or edit components under **Equipment Management**

Use **Sample Submission** to send sample information to the laboratory (if online access is not available, please complete form) →

Apply label to sample jar

Ship sample to laboratory via trackable delivery service (see address list below)

Receive results via email or access them online

FLUID ANALYSIS LAB
2425 WINTON DRIVE
P.O. BOX 68863
INDIANAPOLIS, IN 46268

FLUID ANALYSIS LAB
50910 W. SAM HOUSTON PKWY N
SUITE 700
HOUSTON, TX 77064-9903

FLUID ANALYSIS LAB
5140 75TH STREET
EDMONTON, AB T6E 6K7
CANADA

FLUID ANALYSIS LAB
3060 CALIFORNIA AVE, STE B
P.O. BOX 38256
SALT LAKE CITY, UT 84104

STEP A | SAMPLE INFORMATION

First-time users need to establish a HORIZON[®] account, and new components (sample point) need to be added to your account.

Next, fill out the **QR** (quick response) **code label** () with the corresponding **Component ID** and **Sample Date**. Attach the label to the sample jar and retain the other label for your records.

To improve accuracy and ensure faster processing, use the **Sample Submission** feature in HORIZON to send the sample information to the laboratory. Once the information is submitted online, the QR code will contain all required sample information needed for processing.

NOTE: Provide the laboratory with as much detailed equipment and fluid information as possible. More in-depth analysis is possible when the analyst knows the time on both the unit and fluid and whether the fluid and/or filter have been changed since last sampled



TECHNICAL BULLETIN

How to Use the EZ Sample Label

STEP B | LABORATORY LOCATIONS

A list of available **laboratory locations** is included on the form. Label your package with the laboratory address of your choice and ship it using a trackable shipping service, such as UPS or FedEx.

STEP C | ONLINE ACCESS

If the sample information cannot be submitted online, **complete the simple form** on the right, detach the form and submit it to the laboratory with the sample.

IMPORTANT: Samples will be placed on hold if the component ID does not match an ID in your account and no component information is included on the paper form. Components can be added to your account online via HORIZON or by contacting Customer Service. Samples placed on hold for more than 30 days will be disposed.

